

# 531 Plus & 531 Easy Step Process




**STEP 1**




**STEP 2**



**STEP 3**

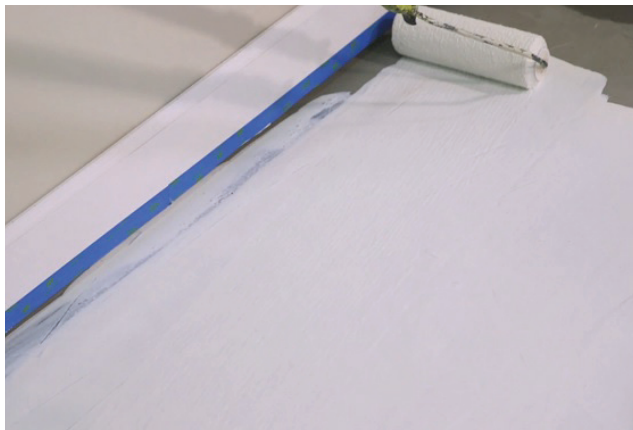

**STEP 4**

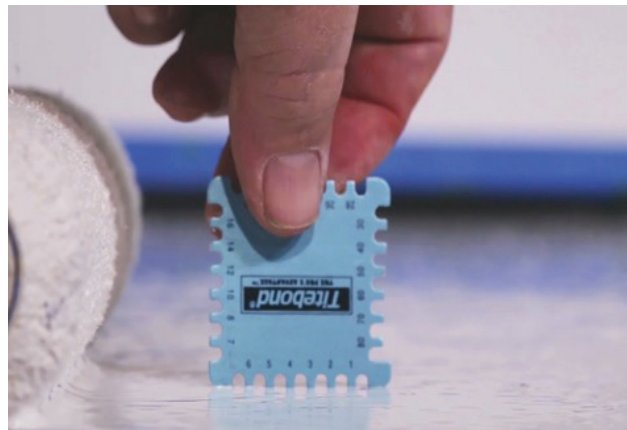

**STEP 5**

**STEP 1:** Combine components by pouring all of Part B into the pail containing all of Part A.

**STEP 2:** Begin mixing both components in Part A pail using a power mixer (e.g. 1/2" drill and paint or plaster paddle). Mix thoroughly for THREE MINUTES. DO NOT thin or hand mix.

**STEP 3:** Once components are thoroughly mixed, Titebond 531 PLUS has a coverage of 320 square feet per gallon. Titebond 531 has a coverage of 250 square feet per gallon.


**STEP 4:** Pour a "wet line" of product, about three inches wide, across the length of the room and spread evenly with a roller. The product may also be used from a pan.

**STEP 5:** When applied correctly, Titebond 531 PLUS will have a wet film thickness of at least 5 mils. Titebond 531 will have a wet film thickness of at least 6.5 mils. Use the included wet mil gauge reader to measure and meet the required condition for the warranty coverage.

# Proceso en pasos sencillos de 531 Plus & 531



**PASO 1**

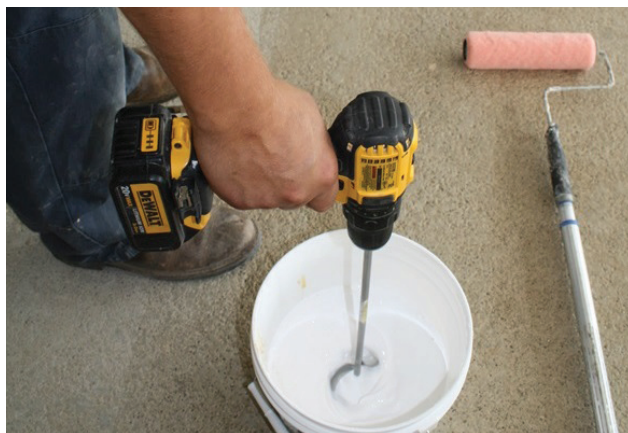


**PASO 2**



**PASO 3**



**PASO 4**

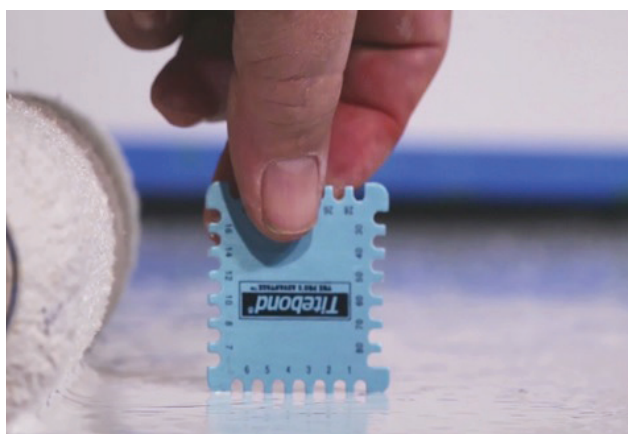

**PASO 5**

**PASO 1:** Vierta toda la parte B en el cubo que contiene toda la Parte A para combinar los componentes.

**PASO 2:** Comience a mezclar ambos componentes en el cubo que contiene la Parte A utilizando una mezcladora eléctrica (p. ej. un taladro de ½ pulg. [1,27 cm] y una paleta para pintura o yeso). Mezcle bien durante TRES MINUTOS. NO lo diluya ni lo mezcle a mano.

**PASO 3:** Una vez que los componentes estén muy bien mezclados, Titebond 531 PLUS tiene una cobertura de 320 pies cuadrados por galón (8 m<sup>2</sup> por litro). Titebond 531 tiene una cobertura de 250 pies cuadrados por galón (6 m<sup>2</sup> por litro).

**PASO 4:** Vierta una "línea mojada" del producto, de aproximadamente 3 pulg. (7,62 cm) de ancho a lo largo de la habitación, y esparza uniformemente con un rodillo. El producto también se puede usar desde una bandeja.

**PASO 5:** Cuando se aplica correctamente, Titebond 531 PLUS tendrá un grosor de película húmeda de al menos 5 mils. Titebond 531 tendrá un grosor de película húmeda de al menos 6.5 mils. Use el lector de mil húmedo que se incluye para medir y cumplir con la condición requerida para la cobertura de la garantía.